




HARLEY & BELLA

**3 IN 1 PET TRAVEL SYSTEM
INSTRUCTION MANUAL**

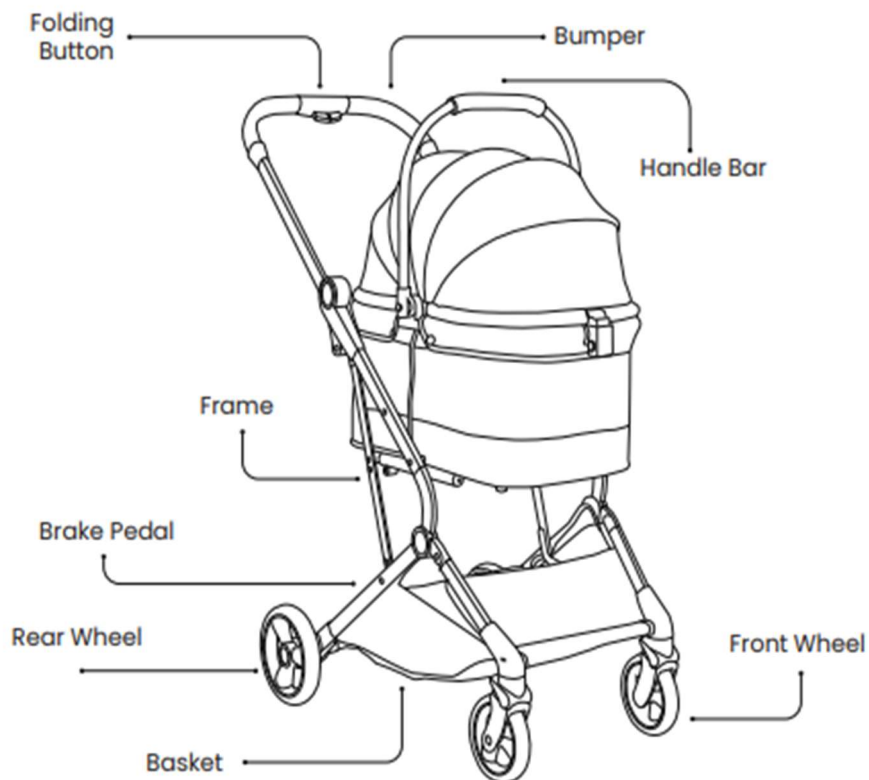

BE SURE TO READ BEFORE USE

1. SAFETY PRECAUTIONS;

IN ORDER TO USE THIS PRODUCT CORRECTLY AND PREVENT INJURY PLEASE BE SURE TO FOLLOW THE WARNINGS AND PRECAUTIONS.

2. WARNING;

THE MAXIMUM LOAD TOLERANCE OF THIS PRODUCT IS 20KG. DO NOT LOAD MORE THAN 20KG OF PETS. THIS MAY CAUSE DAMAGE.

DO NOT DIS-ASSEMBLE OR ALTER THIS PRODUCT.

DO NOT ALLOW SMALL CHILDREN TO USE THIS PRODUCT.

BEFORE USE, PLEASE CHECK IF THE SCREW SHAFT IS LOOSE OR THE PARTS ARE DAMAGED.

IN THIS EVENT, PLEASE CONTACT SUPPORT@HARLEYNBELLA.COM

3. PRECAUTIONS;

DO NOT USE FOR PURPOSES OTHER THAN AS A PET STROLLER.

WHEN USING THIS PRODUCT, PLEASE DO NOT RUN OR FALL AS THIS MAY CAUSE AN ACCIDENT.


PLEASE BE CAREFUL WHEN USED ON UNEVEN ROADS SUCH AS GRAVEL ROADS.

4. FRONT WHEEL INSTALLATION /REMOVAL



1. INSTALLING THE FRONT WHEEL. ALIGN THE HOLE AND INSERT THE FRONT WHEEL VERTICALLY UPWARDS, IN WHILE YOU WILL HEAR A SOUND IN "CLICK.
2. REMOVING THE FRONT WHEEL. PUSH THE BUTTON AND PULL THE FRONT WHEEL OUT VERTICALLY.

5. REAR WHEEL INSTALLATION /REMOVAL

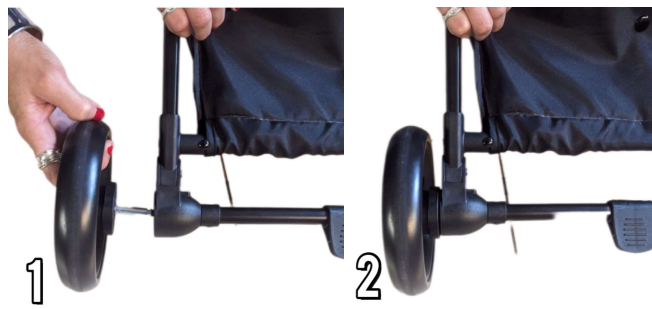

1. INSTALLING THE REAR WHEEL. ALIGN THE HOLE AND INSERT THE REAR WHEEL HORIZONTALLY, IN WHILE YOU WILL HEAR A SOUND IN "CLICK"
2. REMOVING THE REAR WHEEL. PULL OUT THE METAL BUTTON AND PULL REAR WHEEL OUT HORIZONTALLY.

6. UNFOLDING THE FRAME



1. PLACE THE FRAME ACCORDING TO THE PICTURE, WITH THE REAR WHEEL UNDER AND THE HANDLE BARS ON TOP.
2. HOLD THE HANDLE OF THE CART AND PULL UPWARD



3. ONCE THE CART STANDS UP, GENTLY PULL THE HANDLE TOWARDS IT UNTIL IT MAKES A SNAPPING SOUND
4. PUSH THE HANDLE GENTLY TO MAKE SURE THE BODY DOES NOT FOLD

7. FOLD THE FRAME



1. SLIDE THE DOUBLE LOCK BUTTON FROM RIGHT TO LEFT HANDLE TO UNLOCK, AND THEN PRESS THE BACK BUTTON.
2. THE PLATFORM FOLDS SLOWLY FORWARD LEANING DIRECTION.
3. STROLLER FULLY FOLDED.

8. USING THE BRAKE



1. THE BRAKE PEDAL CAN BE UNLOCKED ONLY WHEN THE CART IS RUNNING UPWARD. MAKE SURE THE BRAKE PEDAL IS FULLY UNLOCKED WHEN MOVING THE CART BACK AND FORTH.
2. WHEN PARKING, PLEASE PRESS THE BRAKE PEDAL DOWN TO THE END BEFORE PARKING. WHEN FINISHED PLEASE CHECK WHETHER THE BRAKE PEDAL IS COMPLETELY LOCKED DOWN.

9. INSTRUCTIONS FOR BASSINET

9A UNFOLD AND POSITION THE BASSINET




1. LAY THE PET BASSINET FLAT, PULL THE INNER IRON HANDLE TO BOTH SIDES, AND FIX IT IN PLACE WITH THE FIXING SUPPORT. PLEASE CHECK THAT THE IRON HANDLES ARE SECURED IN PLACE BEFORE USE.



1. PRESS THE BUTTONS ON BOTH SIDES IN THE DIRECTION OF THE ARROW TO THE CENTER TO UNLOCK THE LATCH.
2. THE CANOPY CAN BE FOLDED BACKWARDS AND FORWARDS.

9B LOCK THE BASSINET IN PLACE ON THE FRAME

WHEN STROLLER FRAME IS UPRIGHT / UNFOLDED, THE BASSINET CAN BE LOCKED IN PLACE.

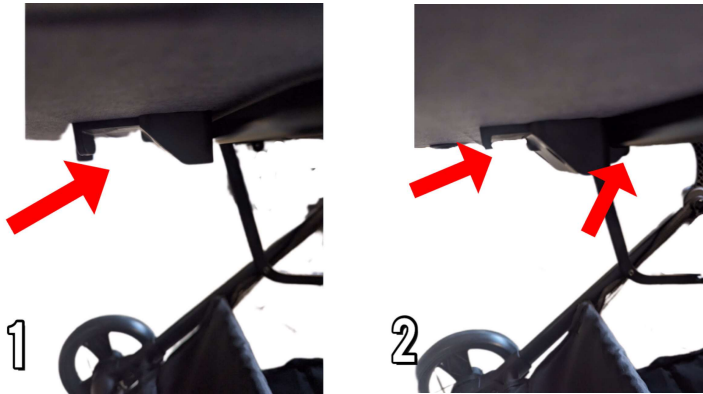

1. THERE IS A CLIP ON THE UNDERSIDE OF THE BASSINET. BUCKLE THE BASSINET CLIP IN THE DIRECTION OF THE ARROW TO SECURE IN PLACE.
2. PUSH THE CLIP IN THE DIRECTION OF THE ARROW. POSITION THE BASSINET ONTO THE FRAME. WHEN YOU HEAR THE SOUND OF CLICKING THE BASSINET IS SECURED IN POSITION.

9C TO UNLOCK THE BASSINET FROM STROLLER POSITION



- 1 TO UNLOCK THE DEVICE, PULL THE CLIP BACKWARDS IN THE DIRECTION OF THE ARROW.
- 2 LIFT THE BASSINET FROM THE FRAME TO DETACH.

HOW TO COLLAPSE THE BASSINET



1. PRESS THE BUTTONS ON BOTH SIDES IN THE DIRECTION OF THE ARROW TO THE CENTER TO UNLOCK THE CANOPY.
2. BRING THE IRON HANDLES TO THE CENTER OF THE BASSINET.



HARLEY & BELLA

EXPLORING THE WORLD ONE PAW AT A TIME

WWW.HARLEYNBELLA.COM